




The Drain Cock will thread into the bottom tank port. This is used to drain any moisture.



Thread the Tee into the side of the air tank.



Next, thread the pressure switch into the tee. We suggest the backside Leaving the front for you Spare Air™.

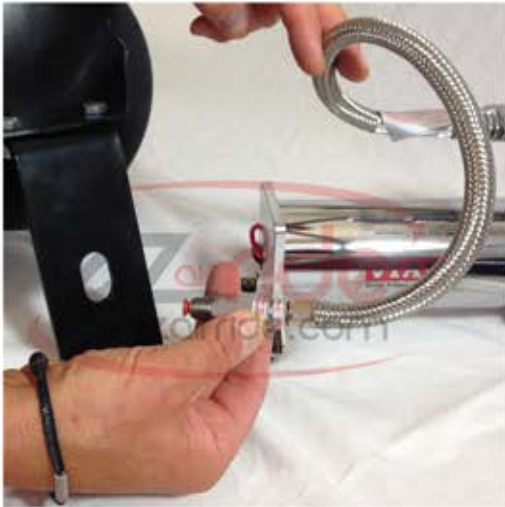

On the opposite side of the tank connect your compressor.



Thread the last 1/4" reducer to the Viarr 444c Chrome Compressor.



Now, plug your compressor into the side port on the air tank. Simply, through our EZ Tank Bracket hole.



Congratulations!
Your new 7 gallon air tank and valves are now setup and ready for air line and plumbing.